


BKR0608

User Instructions

1. General

The BKR0608 is a cable assembly used for testing BKR Portable radios. This cable is compatible with HP8920 only. If using Aeroflex 3920, please use BKR0608A.

2. The Kit

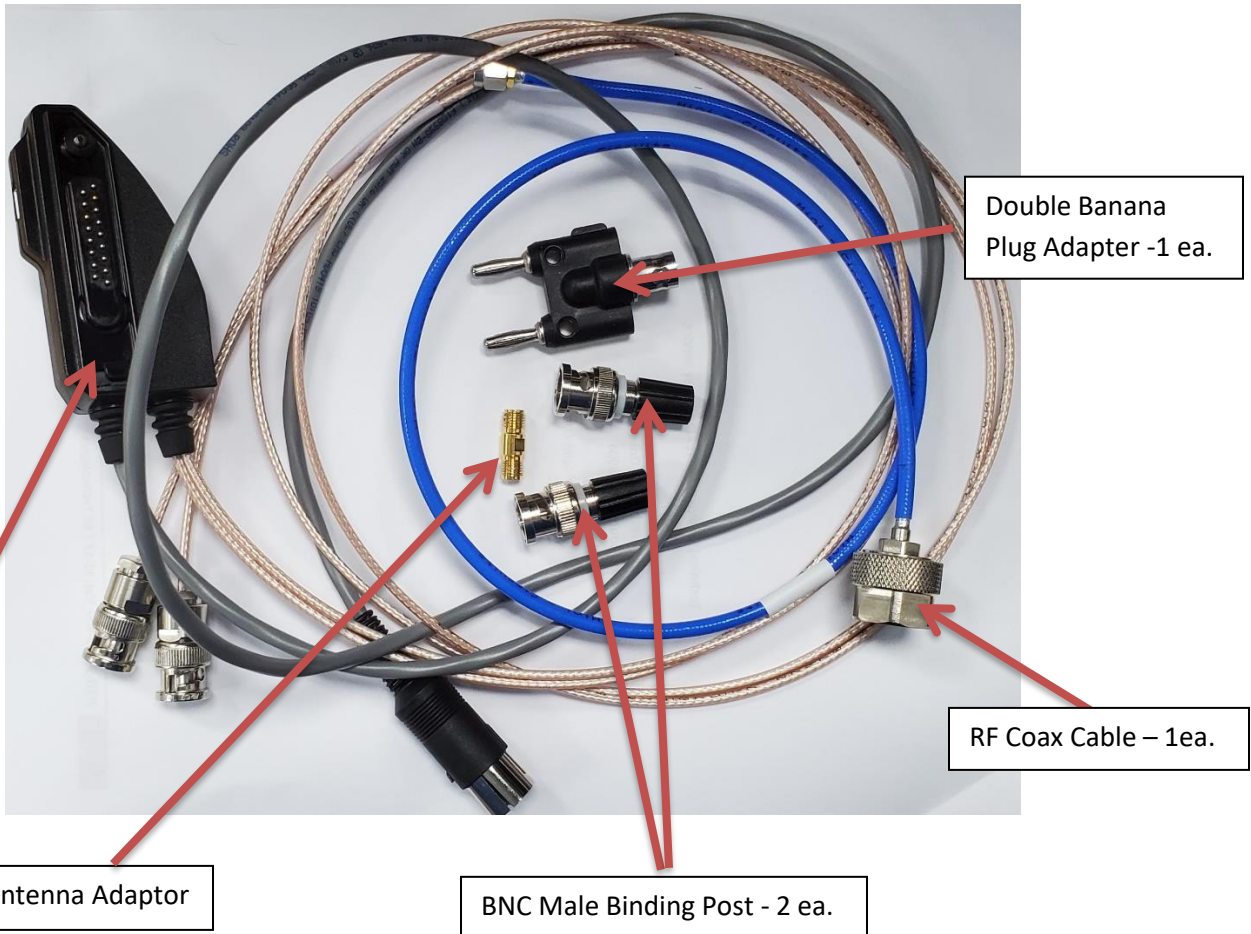


3. Set-Up


- a. Please refer to the diagram below for all the setup instructions.
- b. Install the BNC Binding post then the Double Banana Plug adapter to the Audio In port 1 and 2 of HP8920.
- c. Connect the brown Audio output coax cable (labeled) to the Double Banana Plug Adapter.
- d. Connect the other brown Mic audio coax cable to Audio Out port of HP8920.
- e. Connect the DIN Connector Cable to MIC/ACC port of HP8920.




- f. Connect the RF Coax cable (N-Type) to the RF IN/OUT port of HP8920.
- g. Attach the Antenna Adaptor to the BKR Portable Antenna Connector.
- h. Connect the RF Coax cable (SMA) to the Antenna Adaptor.
- i. Connect the side connector assembly to the radio Accessory port.

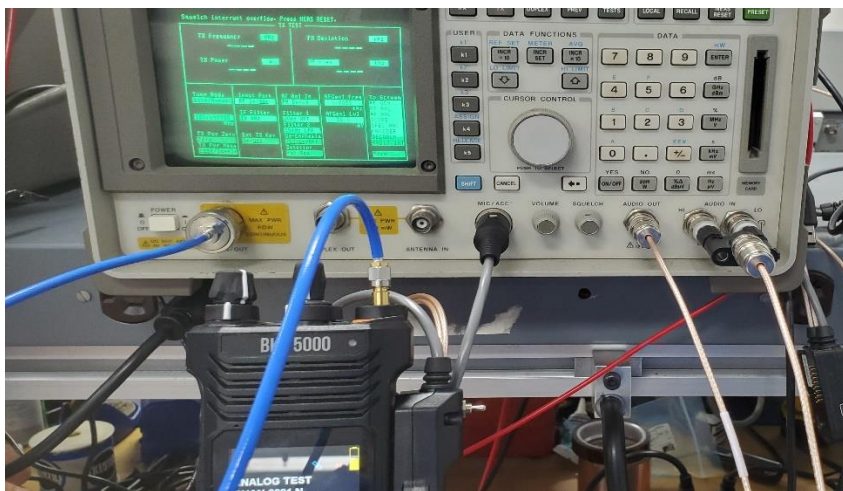

- j. On HP8920, in RX Test mode, place the cursor to AF ANL under To Screen box then press the cursor control knob. It should go to the next screen.

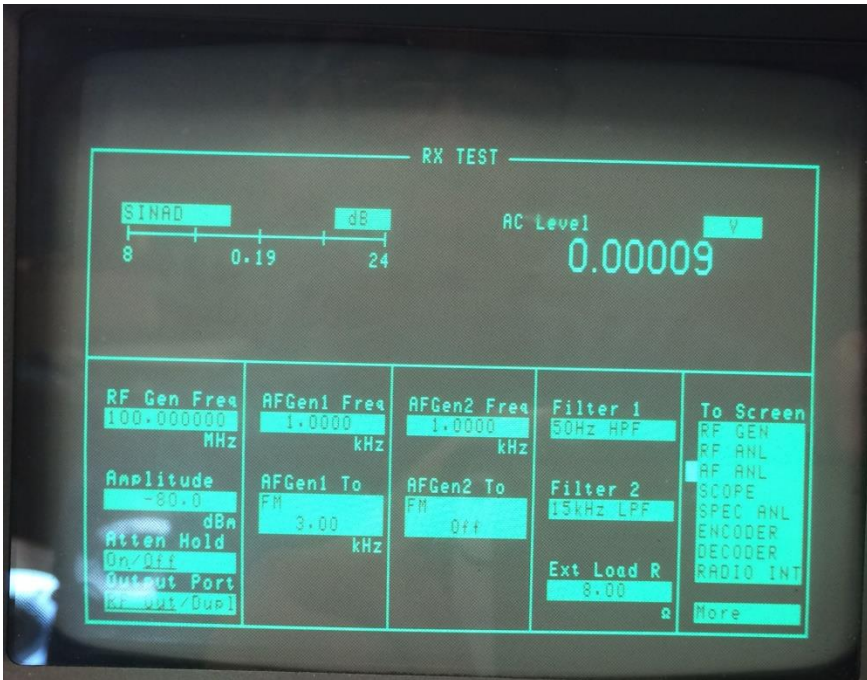

- k. Place the cursor to Audio In Lo then press the cursor control knob then choose Float.

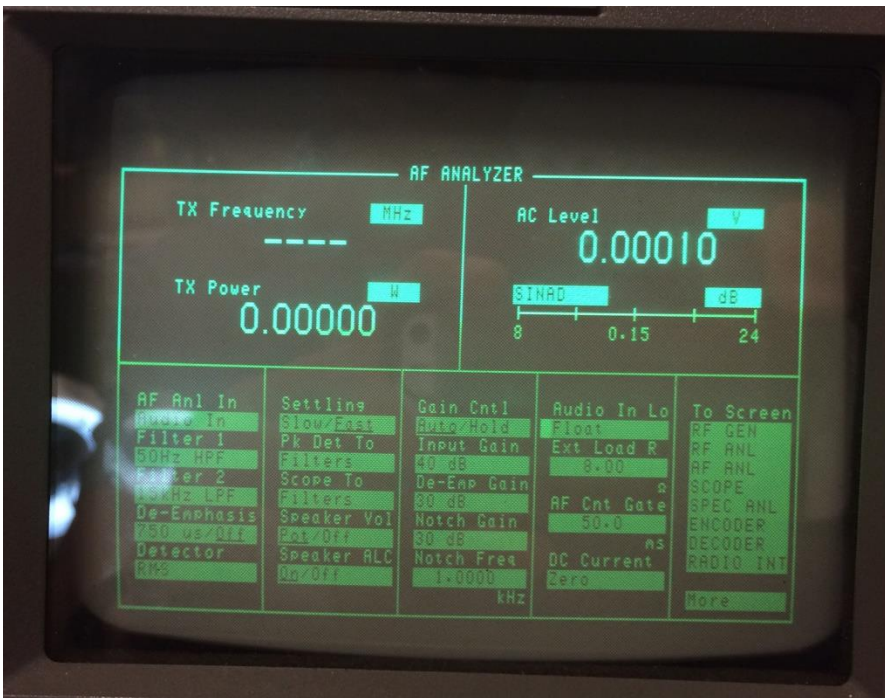

- l. Go back to RX Test mode, the generator is now ready for use.

NOTE: The BKR Portable radios have a floating ground audio output and should be connected as such.

Technical Service Support - Customer Service

BK Technologies
7100 Technology Drive
Melbourne, FL 23904
(800) 422-6281
www.BKTechnologies.com